



LOCATION WITHIN FUSEBOX

LEGEND FUSEL

No.	Val.	Function
1.	7.5	Right front and left rear position lamps license plate, underhood
2.	7.5	Left front and right rear position lamps, trunk, dome and panel switch, courtesy light
3.	10	Right low lamp (relay energized)
4.	10	Left low lamp (relay energized), warning lamp
5.	10	Right high lamp and warning lamp
6.	10	Left high lamp
7.	15	Front fog lamps and warning lamp
8.	7.5	Rear fog lamps and warning lamp
9.	10	External mirror defogging, rear window relay coil, warning lamp
10.	20	Back-up lamps, windshield washer
11.	7.5	Turn signal lamps, position lamps
12.	10	Air conditioning relay
13.	10	Rear cigar lighters
14.	7.5	Electric fan motor relay coil, test instrument, cruise control
15.	15	Stop lamps
16.	10	Electric door lock/unlock system
17.	20	Head lamps washer, hazard lamps
18.	30	Right front window lift
19.	30	Left front window lift

No.	Val.	Function
20.	30	Spare
21.	15	Front dome lamp, glovebox lamp, fuse box lamp, front cigar lighters
22.	15	Motor relay power
23.	20	Sun roof, head seat
24.	25	Spare

