



HILL HOLDER FAILURE (amber)

(for versions/markets,
where provided)

Fitting the key into the ignition device, the warning light (where provided) turns on, but it should go off after a few seconds.


If the warning light stays on (on certain versions a message is displayed) there is a failure in the Hill Holder system. Contact Alfa Romeo Authorized Services.




ASR SYSTEM (WHEEL ANTISKID SYSTEM) (amber)

Fitting the key into the ignition device the warning light turns on, but it should go off after few seconds. The warning light flashes when the system cuts in, to alert the driver that the system is adapting to the road surface grip conditions.

ASR deactivation

When the ASR is deactivated manually (pressing the ASR/VDC button) (see paragraph "ASR system" in section "Dashboard and controls") the ASR/VDC button turns on (on versions fitted with "Reconfigurable multifunction display" symbol  is also displayed).

ASR failure

In the event of a failure the ASR system is deactivated automatically and on versions fitted with "Reconfigurable multifunction display" the symbol  is displayed. In this case contact Alfa Romeo Authorized Services as soon as possible.



EXTERNAL LIGHTS FAILURE (amber)

The warning light (where provided) turns on (on certain versions a message is displayed) when one of the following lights is failing:

- sidelights
- direction indicators
- rear fog guards
- number plate lights.

The failure referring to these lights could be: one or more blown bulbs, a blown protection fuse or an electric connection cut-off.